

BDSYSTEMS

3D SYSTEMS University

CubeX 3D Printer

"Lesson – Downloading and Installing CubeX Software, Software Overview"

Revision date: 10/22/13



Objectives

After completing this lesson you will:

- Know how to Download and install the CubeX software
- Have an overall understanding of the CubeX software
- Be ready to learn how to prepare and print your creations



Downloading the CubeX Software

Go to **Cubify.com/cubex/index.aspx** and click on **DOWNLOAD SOFTWARE FOR WINDOWS** to your USB stick or save on your computer.





Installing the CubeX Software

1. Go to the directory where the CubeX software was downloaded and unzip the CubeX software folder.

2. Run the CubeX Setup file.



3. Follow the installer wizard.



BDSYSTENS

Installing cont.

4. Select a destination for the installation.

5. Click next to begin the installation. A message "if you want to let the CubeX software make changes to your computer" will appear, select yes.

6. The installation is now complete, you can open the CubeX software from the icon located on your desktop.

CubeX	
Select Installation Folder	2
The installer will install CubeX to the following folder.	
To install in this folder, click "Next". To install to a different folder,	enter it below or click "Browse",
Eolder	
C:\Program Files (x86)\3D Systems\CubeX\	Browse
	Disk Cost
Cancel	< Back Next >



BDSYSTENS

CubeX Software Overview

• The CubeX software is used to create the .cubex files that your CubeX will use to create your parts. The software allows you to orient, scale, re-size and rotate the part before printing.

• When you first open the CubeX software you will be greeted with a message asking you to configure your printer in the CubeX software.



Messa	ge	
	Please set your printer configuration in the following dialog	
	OK	



Software Overview

• Once the printer configuration window opens, select the number of "Print Jets" that is installed and the material types that are loaded into the Print Jets.Click "OK" to save these settings.

Printer Type:	Cube X 🔹
Print Jets:	•
Print Jet 1 Material:	
Print Jet 2 Material:	(· · · · · · · · · · · · · · · · · · ·
Print Jet 3 Material:	



HOME TAB



STL FILE	Open	Opens a .stl file
	Open Model Assembly	Open a multi-part assembly of .stl files
	Close	Close the open .stl file
	Save As	Save the current open .stl file
	Auto Place	Automatically places .stl files which are already open
	Single Shell	When checked will automatically select all parts as one shell
PRINT FILE	Open	Opens a .cubex file
	Close	Close the open .cubex file
	Save Print File	Save the current open .cubex file

BDSYSTEMS"

HOME TAB (cont.)



SCALE GEOMETRY	% Scale	Scale your part before creating the .cubex file
	To mm	Change a part from inches to mm
	To inches	Change a part from mm to inches
~	Revert	Undo changes made using the Scale Geometry options
ROTATE GEOMETRY	X/Y/Z	Rotate the part in the X, Y, or Z axis
	Revert	Undo changes made using the Rotate Geometry options
PICK SHELLS	Select which Print Jets print which parts. The available options will vary depending on how many Print Jets you have active and what colors are loaded into them.	
BUILD	Opens the build settings window.	

BDSYSTEMS"

VIEW TAB

Home	Settings	
Com Zoom Zoom Zoom Zoom	Control View C	About

ZOOM	Zoom In	Press to zoom in
	Zoom Out	Press to zoom out
VIEW	Top View	Press to view the part from above
	Front View	Press to view the part from the front
	Left View	Press to view the part from the left
	Right View	Press to view the part from the right
PRINT PATHS	Show Print Jet 1	Toggle to show the print paths for print jet 1 in a .cubex file
	Show Print Jet 2	Toggle to show the print paths for print jet 2 in a .cubex file
	Show Print Jet 3	Toggle to show the print paths for print jet 3 in a .cubex file
	Show All Layers	Toggle to show all layers or to show one layer at a time. Scroll through the layers using the scroll bar found down the right hand side of the window

BDSYSTEMS™

SETTINGS TAB



PRINTER CONFIGURATION	Opens the printer configuration window.
BUILD SETTINGS	Opens the build settings window.
FIRMWARE UPDATE	Used to update the CubeX 3D Printer firmware.

